
## **HSG282 Publication**


Page 41, Solid bromine-based disinfectants states: 'It must be added from a suitable dosing unit and ideally automatically injected **BEFORE** the filter'

## **OTHER BRAND**

Dispenser is inside the filter cartridge and **AFTER** the filter process

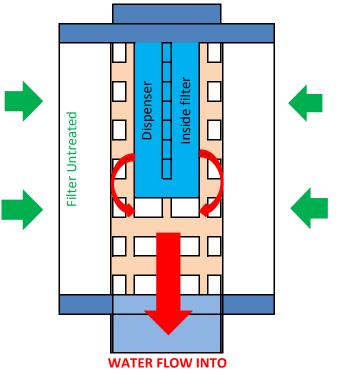

**PLUMBING AND SPA** 

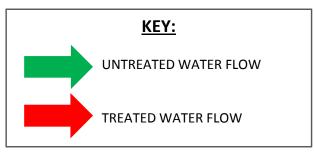



SPAPAL is mounted close to the filter. In the <u>IDEAL</u> postion <u>BEFORE</u> the filter

